


10788-10 PULL STRAP FOR ROLL-UP DOORS INSTALLATION INSTRUCTIONS

FOR USE WITH VERTICAL LOGISTIC POSTS AND
“A” HORIZONTAL LOGISTIC TRACK

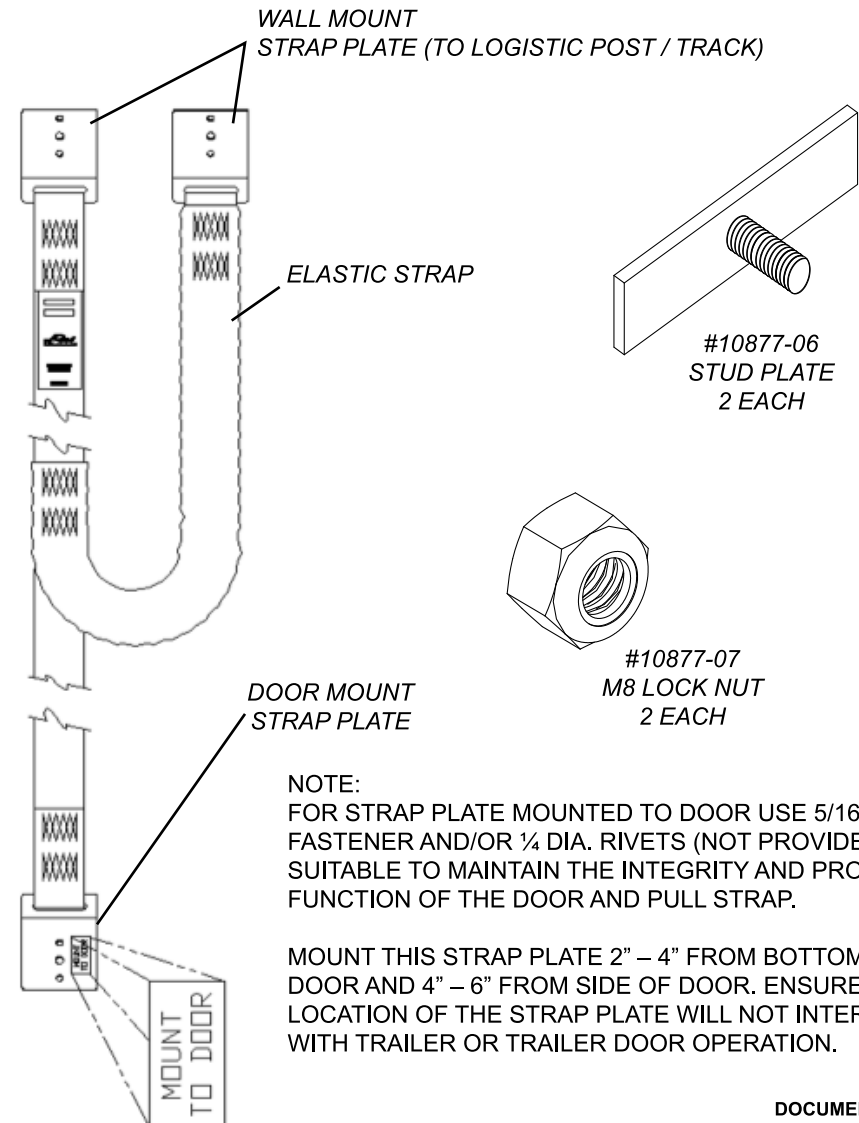

For more information or to place an order, call S-Line's Customer Service Department at (800) 687-9900.

Thank You for Choosing S-Line!



By  Ankra International, LLC[®]

S-Line, LLC, Grand Saline, TX 75140 • www.slinc.com



Ankra Int., Erlanger, KY 41018 • (800) 929-2627 • www.ancra.com

INSTALLING STRAP IN HORIZONTAL LOGISTIC TRACK




INSTALL STUD PLATE INTO "A" LOGISTIC TRACK/POST



INSTALL STRAP END PLATES TO STUD WITH LOCK NUT (SUPPLIED). TIGHTEN TO 15-17 FT LBS. DO NOT USE IMPACT WRENCH

FOR HORIZONTAL LOGISTIC TRACK, INSTALL THE SPECIFIED STRAP END PLATES TO THE TRACK WITH ONE PLATE MOUNTED DIRECTLY NEXT TO THE OTHER PLATE.

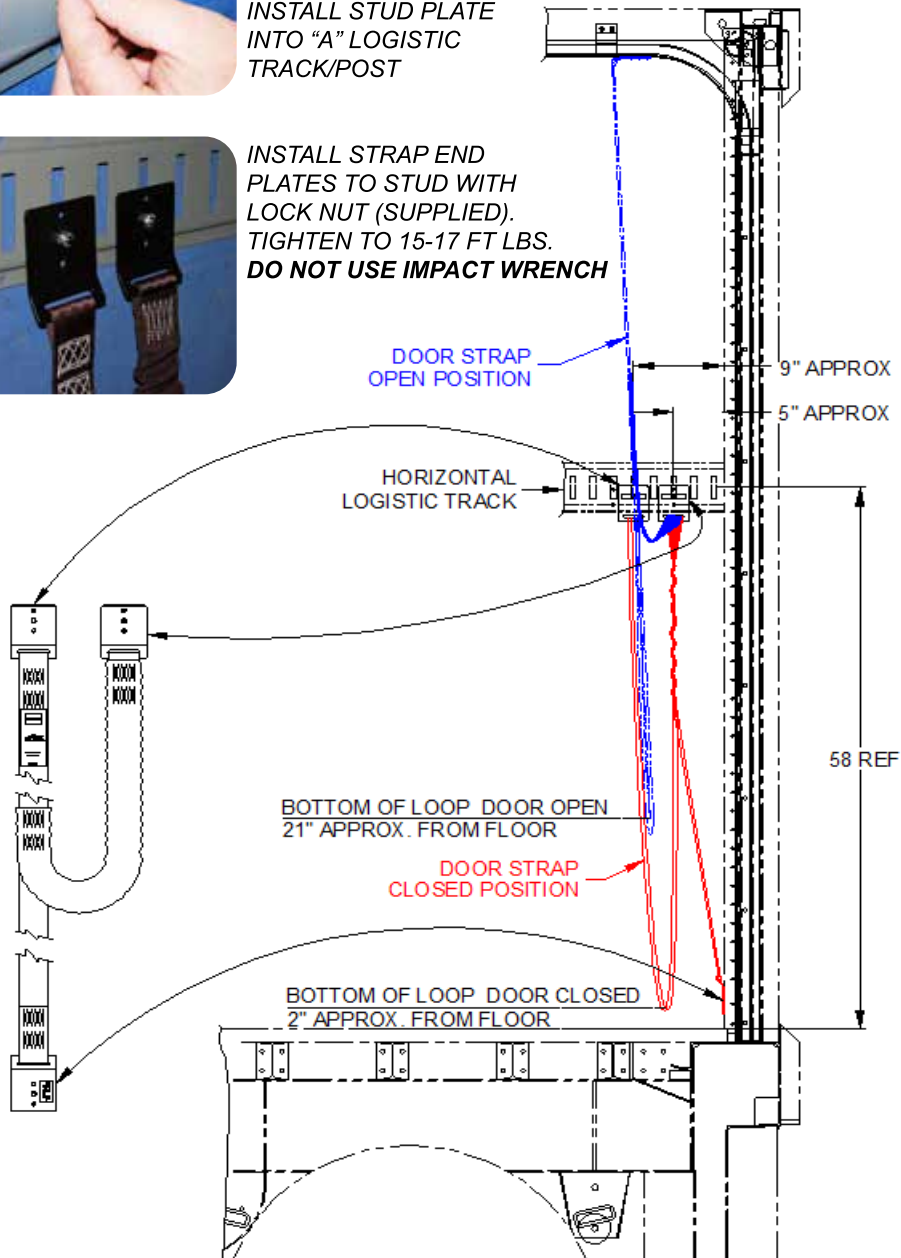

INSTALLING STRAP IN VERTICAL LOGISTIC TRACK / POST



FOR VERTICAL LOGISTIC POSTS, INSTALL THE SPECIFIED STRAP END PLATES TO THE TRACK WITH ONE PLATE MOUNTED DIRECTLY BELOW THE OTHER PLATE. PLATES ARE TO BE MOUNTED TO THE POST CLOSEST TO THE DOOR.

SEE PAGE 2 FOR MOUNTING STUD PLATE AND STRAP END PLATE TO LOGISTIC TRACK.

